




Revision: 2

Rev. Date: 10/12/2021

Page 1 of 2

P.O. Box 3286 - Logan, Utah 84323, U.S.A. - Tel. (800) 729-8350 - Tel. (435) 755-9848 - Fax (435) 755-0015 - www.scytek.com

Quick-Dip Differential Stain Kit

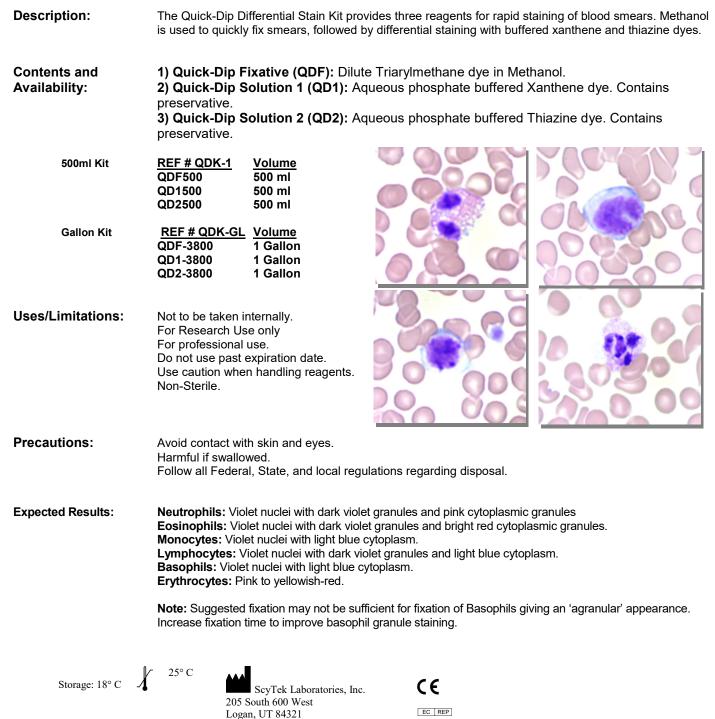

U.S.A.

Emergo Europe Prinsessegracht 20 2514 AP The Hague, The Netherlands



Instructions For Use

DK-IFU-RU

Rev. Date: 10/12/2021

Revision: 2 Page 2 of 2

P.O. Box 3286 - Logan, Utah 84323, U.S.A. - Tel. (800) 729-8350 - Tel. (435) 755-9848 - Fax (435) 755-0015 - www.scytek.com

Notes:


- Intensity of staining can be controlled by varying number of dips in each dye solution.
- Back of slide may be wiped between steps to reduce cross contamination.
- Do not allow stain to dry on slide between staining steps.
- Keep reagents tightly closed when not in use.
- Filter solutions as needed if precipitation occurs.
- Replace solutions if results differ from normal.


Procedure:

- 1. Prepare blood smear as usual and fix in Quick-Dip Fixative (QDF) by dipping into solution 5 times for 1 second each.
- 2. Stain in Quick-Dip Solution I (QD1) by dipping into solution 5-15 times for 1 second each.
- 3. Stain in Quick-Dip Solution II (QD2) by dipping into solution 5-15 times for 1 second each.
- 4. Rinse slide by dipping into deionized water (not provided) by dipping into solution 5 times for 1 second each.
- 5. Allow slide to air dry and examine under oil-immersion or clear and mount in synthetic resin.

Bulk Reagent Ordering Information and Current Pricing at www.scytek.com

Description:	Catalog #	Volume
Quick-Dip Fixative	QDF500 QDF999 QDF-3800	500 ml 1000 ml 1 Gallon
Quick-Dip Solution 1	QD1500 QD1999 QD1-3800	500 ml 1000 ml 1 Gallon
Quick-Dip Solution 2	QD2500 QD2999 QD2-3800	500 ml 1000 ml 1 Gallon





CE

Emergo Europe Prinsessegracht 20 2514 AP The Hague, The Netherlands